

Instructions for completing an online induction to the EastLink site and uploading of qualifications



STEP 1 – Ensure your Company has a valid site agreement in place.

Prior to accessing the permitted system, all Contractors are required to have a site agreement in place. Please check with your EastLink representative to ensure you have a site agreement in place. If a site agreement is not in place, provide your Company details which must include your Company's ABN number to your EastLink Representative.

When the agreement has been approved and set up, you will receive a confirmation email.


Please ensure your Company's site agreement is set up prior to registration, as this will affect the automatic issue of induction from the system.


STEP 2 – Register Online


In order to access the online induction, subcontractors and their staff will need to register online. Please navigate the link: https://www.permitted.com.au/registration.php


Follow the registration steps below, employees will need to use individual email addresses or mobile phone number.

Your ABN will also be required for registration to ensure your company is registered in the permitted system.

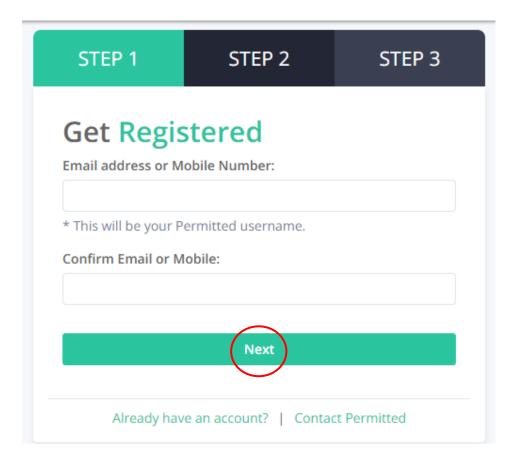

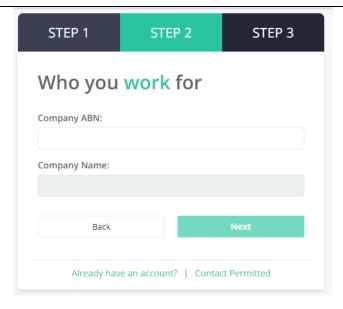

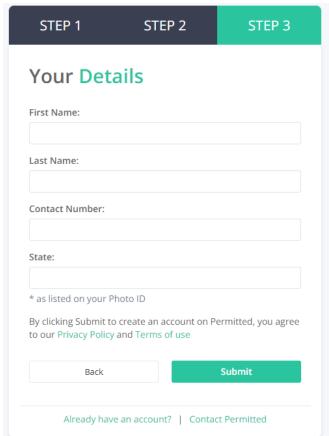


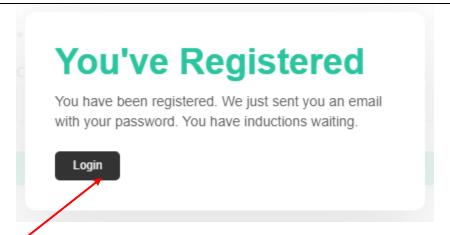


Once successfully registered, you will receive an automatic email or SMS notification and a password for you to login into your account.

Step 3 - Click Login to complete online induction


Enter your username (email address or mobile phone number) and select Continue.

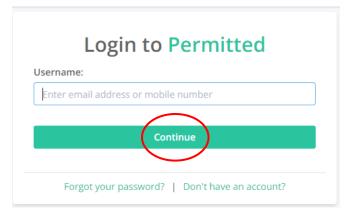


The password box will appear. Enter the password from your SMS or email:

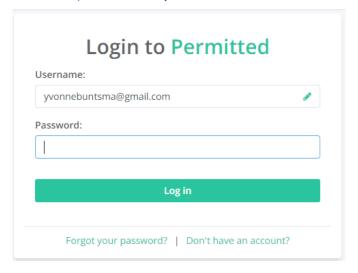

You are now prompted to enter a new password:

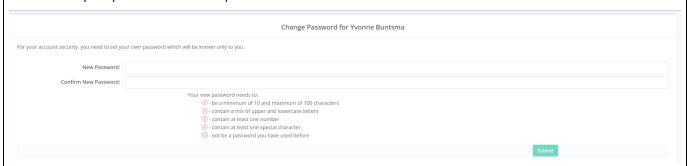


You will now be prompted to login using your updated password.

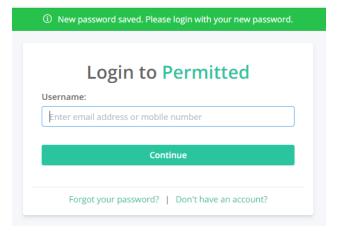

You will be taken to the Permitted Homepage. Select the Inductions Waiting button at top left hand corner.

Select the 'Induction Waiting' tab to begin your induction. A screen will appear with any applicable inductions:

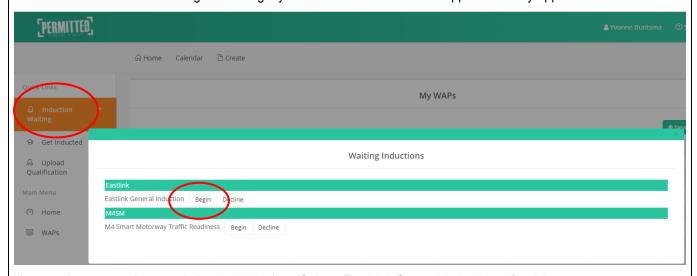


You may have more than one induction invitation. Select 'EastLink General Induction - Begin'.

If you do not have EastLink General Induction available, please contact: ybuntsma@connecteast.com.au

Pre-Requisites


The following screen will appear:

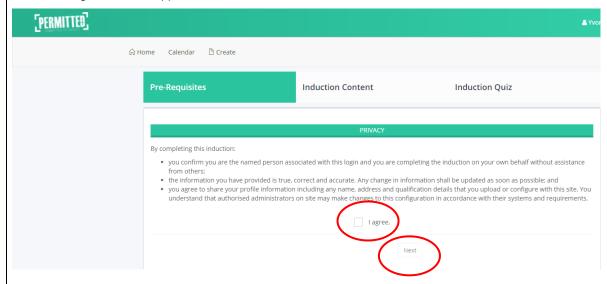


The minimum requirement for working on EastLink is to provide a copy of a White/Red Card (also known as Construction Induction Card) and a copy of certified and current photo identification. Typical certified photo identification is driver's license, passport, Working with Children's Card, National Police Check, Worksafe High Risk License etc.

Note: Under the Victorian OHS Regulations 2007, working on or adjacent to a roadway is classified as high-risk construction work and requires Construction Induction Training. If you do not have a Construction Induction Card please contact Yvonne Buntsma on 0407 398 533 or ybuntsma@connecteast.com.au to discuss. Dependent on the works being performed an exemption may be provided.

Select Upload New on OHS - White Card drop down box:

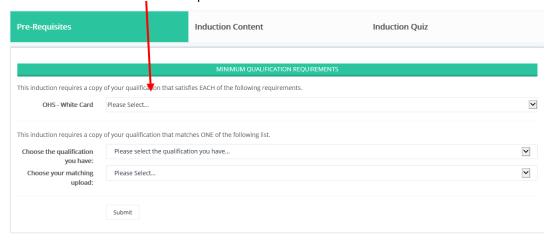


Enter details of qualification and submit (Note. A White/Red Card does not expire):

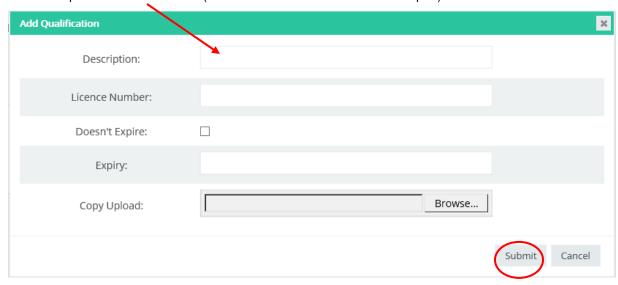


Repeat above step for Driver's license/photo identification.

Upload copies of any other relevant license ie. Traffic Management, First Aid, Confined Space, Electrical License, Working at Heights, National High-Risk License etc.

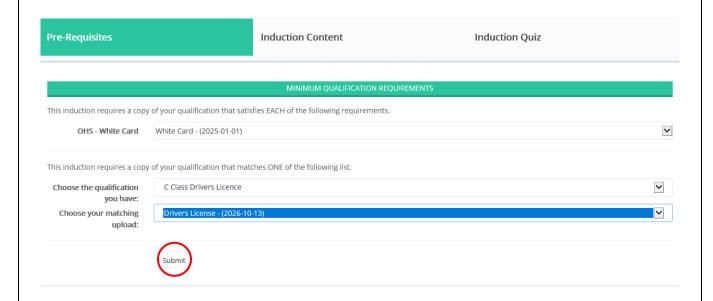

The EastLink General Induction will start automatically. View the presentation. At the completion of the presentation, select the Start Induction Quiz.

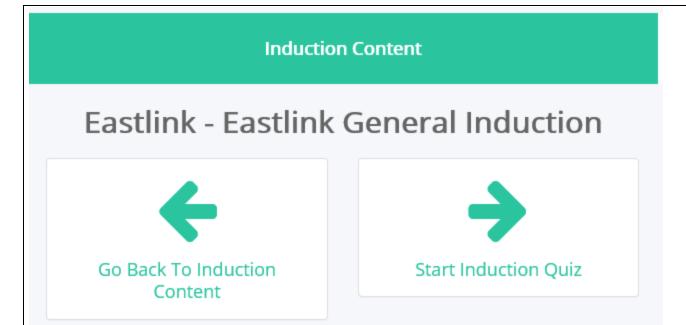


You will be required to complete the quiz and answer all questions correctly. Following the quiz a screen will appear with your answers. Questions marked in red mean an incorrect answer.


You will be notified via email or SMS on whether you have passed or failed; this will also generate an automated email to EastLink. Three successive fails will see the induction application rejected.

Step 4 – Login to Permitted Site to Upload Qualifications


Enter your user name (email address) and password and select Login

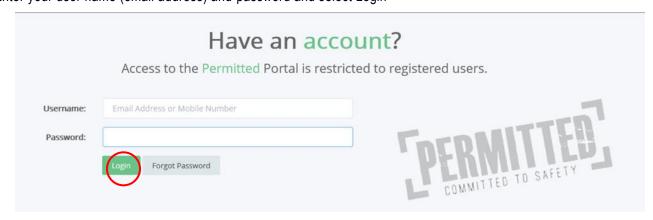

Select Upload Qualifications:

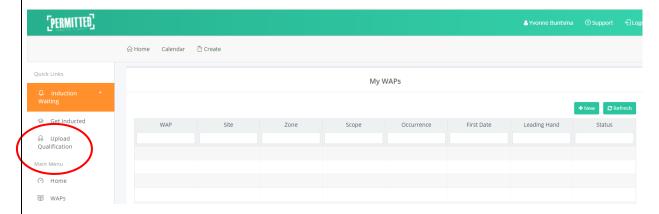

Enter details of qualification and submit:

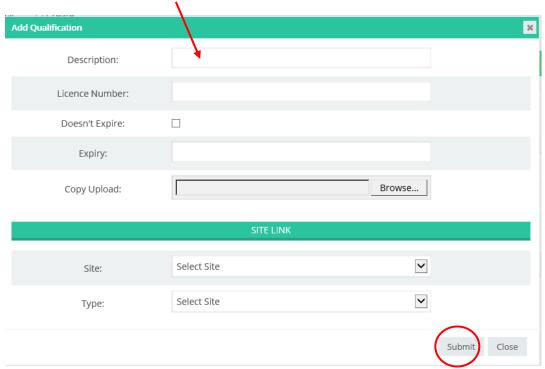

Note: If the qualification does not expire for example White Card, select doesn't expire.

Note: Upload a copy of your qualification as a jpeg or pdf file.

Note: Under site select EastLink

Note: Under Type select the qualification type for example "C Class Driver's License, Confined Space, White Card"

etc. Only one qualification type is to be selected for each qualification.

Repeat above step for each relevant qualification.