

# EastLink tag Installation instructions



## 1 Check you are using the correct tag

The three letters printed on the side of the tag indicate the class of vehicle it should be used in. For details visit [EastLink.com.au/class](http://EastLink.com.au/class)

**CAR** Car

**LCV** Light Commercial Vehicle

**HCV** Heavy Commercial Vehicle


**The class of tag must exactly match the class of vehicle.**

## 2 Clean the windscreen

Clean the windscreen surface where the tag holder will be mounted using the cleaning tissue provided with the tag.

## 3 Attach the holder to the tag

If the holder has not already been attached to the tag, slide it into the slot on the back of the tag. The holder will click into position.

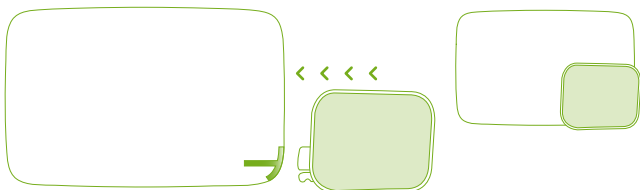

## 4 Position tag on windscreen

Before you attach the tag and holder to the windscreen, check it will fit on the windscreen without blocking the driver's vision.

### Cars

If your vehicle does not have a metallised windscreen, position the tag behind the rear vision mirror (below any tinted sunscreen area). If your vehicle has a metallised windscreen, consult your vehicle's handbook or manufacturer to determine where the tag should be positioned.





### Trucks

Position the tag vertically, with the holder at its foot, near the bottom of the windscreen (above any metallic stone guard). If your vehicle has a metallised windscreen, consult your vehicle's handbook or manufacturer to determine where the tag should be positioned.



## 5 Attach tag and holder to windscreen

Remove the adhesive backing from the back of the holder, and press the tag and holder firmly to the windscreen for at least 10 seconds. Do not disturb for at least 24 hours to allow the adhesive to set.

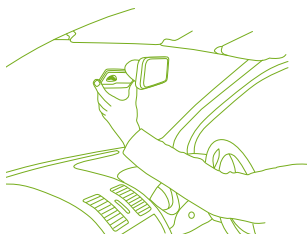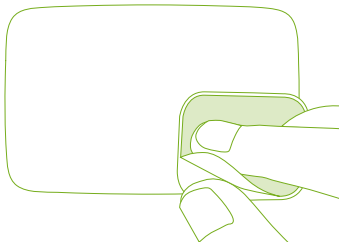

If you have installed the tag and it does not beep when passing under a tolling gantry, please phone us on (03) 9955 1400.